



# INTERPUMP GROUP

<b>I GB F</b>	<b>ISTRUZIONI D'USO INSTRUCTIONS FOR USE MODE D'EMPLOI</b>	<b>D E P</b>	<b>BEDIENUNGSANLEITUNG INSTRUCCIONES DE USO INSTRUÇÕES DE USO</b>
-----------------------	--	----------------------	---

Questo manuale deve essere letto e compreso in accordo al libretto generico "Istruzioni d'uso e manutenzione".  
 This manual must be read and followed in accordance with the generic "Instructions for Use and Maintenance" booklet.  
 Ce manuel doit être lu et compris en accord avec la notice générale "Mode d'emploi et d'entretien".  
 Dieses Handbuch ist in Verbindung mit dem allgemeinen Handbuch "Gebrauchs- und Wartungsanleitung" zu lesen und zu verstehen.  
 Este manual debe leerse y comprenderse de acuerdo con el manual general "Instrucciones de uso y mantenimiento"  
 Este manual deve ser lido e interpretado de acordo com o livro genérico "Instruções de uso e manutenção"

50



S  
E  
R  
I  
E  
S

Type Type Type Tipo Tipo	Flow rate Débit Förderstrom Caudal Portata		Pressure Pressione Druck Presion Pressione			rpm t/m upm r/m g/m	Power Puissance Leistung Potencia Potenza		Weight Poids Gewicht Peso Massa		
	L/min	gpm	bar	MPa	psi		Hp	kW	Kg	Ibs	
W70	11	2.90	70	7	1015	1450	2.0	1.47	6.5	14.33	0.43
W71	13	3.43	70	7	1015	1450	2.5	1.83	6.5	14.33	0.43
W91	13	3.43	90	9	1300	1450	3.0	2.20	6.5	14.33	0.43
W98	11	2.90	100	10	1450	1450	3.0	2.20	8.5	18.73	0.43
W99	13	3.43	100	10	1450	1450	3.3	2.42	8.5	18.73	0.43
WS137	13	3.43	120	12	1750	1450	4.0	2.94	8.7	19.18	0.43
WS149	11	2.90	140	14	2030	1450	4.0	2.94	8.7	19.18	0.43
W996	15	3.96	75	7.5	1100	1750	3.0	2.20	8.5	18.73	0.43
W995	13	3.43	90	9	1300	1750	3.0	2.20	8.5	18.73	0.43
W997	15	3.96	140	14	2030	1750	5.5	4.04	8.7	19.18	0.43
WW141	11.5	3.04	140	14	2030	2800	4.0	2.94	8.5	18.73	0.43
WW161	14	3.69	160	16	2320	2800	5.5	4.04	8.5	18.73	0.43
WW935	13.2	3.48	172	17.2	2500	3400	6.0	4.41	8.5	18.73	0.43
WW944	16.6	4.38	172	17.2	2500	3400	7.5	5.51	8.5	18.73	0.43

